

## Suggested Supplies



**Cutting Tools:** Utility knife or most power cutting tools



**Adhesives:** Ceramic Tile Mastic Type 1, Clay-based Wallpaper Paste, Contact Cement or Double Sided Mounting Tape




**Primers (Optional):** Professional Level Finish Primers with low or no VOC off-gasses



**Paints (Optional):** Latex or water-based paints with low or no VOC off-gasses


**Additional Tools (Optional):** Paintable Caulk or Compound Joint, Metal Ruler, Level, Finishing Nails, Paint Brush

1

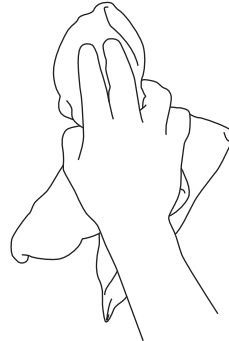

Prepare the installation surface by cleaning it thoroughly.


2

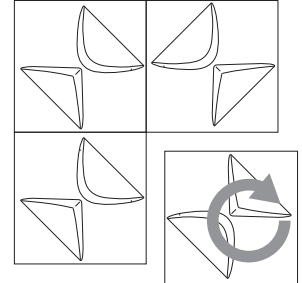

Select a pattern for installation. Arrange it on the floor by rotating the tiles to preview.


## PERMANENT INSTALLATION

3

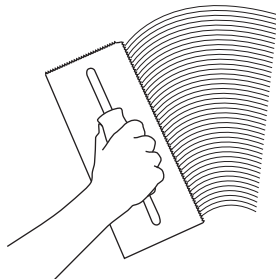


Trowel tile mastic on wall, apply a thin coat to back of tiles as well. For smooth walls use a 3/16" V-notched trowel. Rough walls use a 5/16" V-notched trowel for applying the mastic.

4

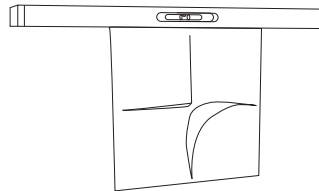


Use a level and a ruler to ensure tiles are properly aligned.

5

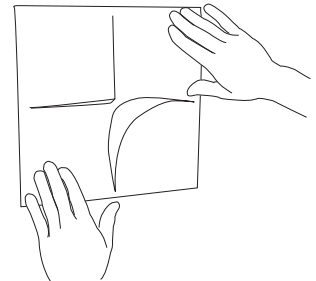


Apply tiles to surface, pressing each firmly, making sure that all corners are in contact with the surface.

## TIP

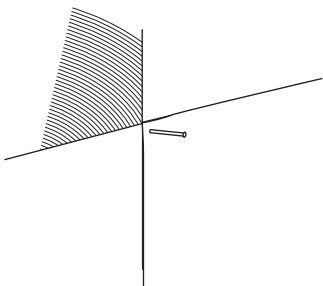


If a corner won't stay sealed to wall, use a finishing nail to tack it down. The hole can be covered with primer or a lightweight spackle.

6

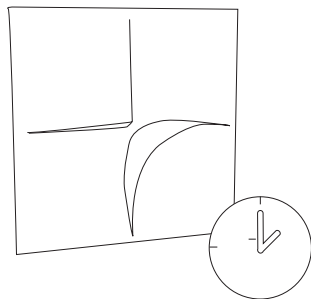


Allow adhesive to dry (following adhesive manufacturers instructions).

7 (optional)







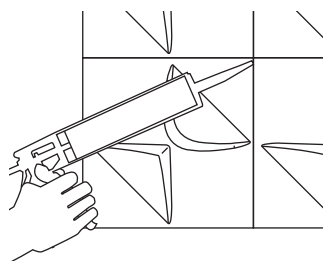


Use paintable caulk or joint compound to seal the seams. Clean up and smooth caulk as you go along before it sets. Tiles should not be sanded.

8 (optional)

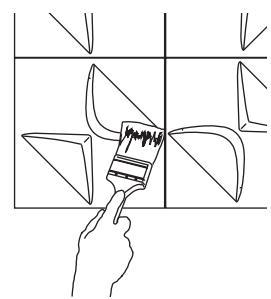

Coat tiles once with primer first and then with the finish of your choice. Latex, water and oil-based paints are applicable. Apply finish in thin coats.
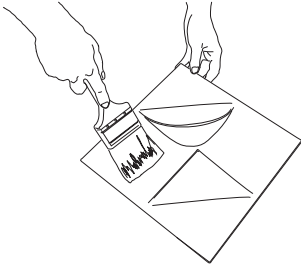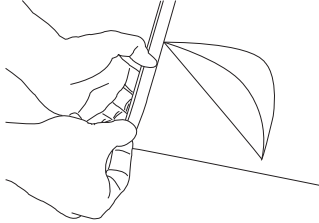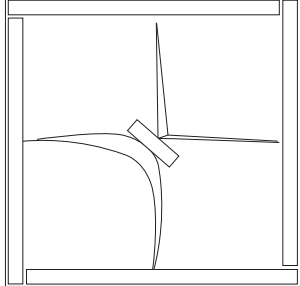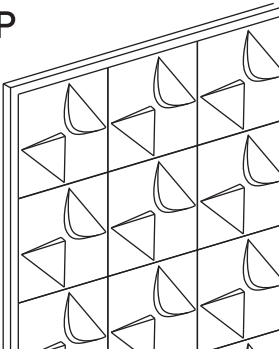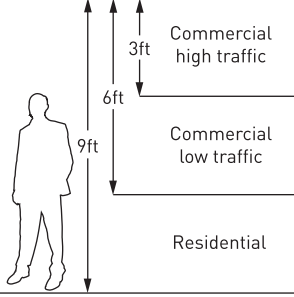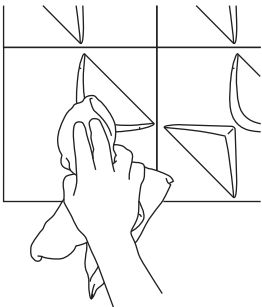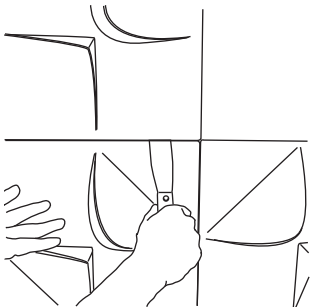
<p><b>TEMPORARY INSTALLATION</b></p>	<p><b>3</b></p>  <p>Coat each tile with primer first and then the finish of your choice. Latex, water and oil-based paints are applicable. Apply finish in thin coats.</p>	<p><b>4</b></p>  <p>Apply the selected adhesion method to the perimeter and the center of tile when possible. We recommend 3M mounting tape.</p>	<p><b>5</b></p>  <p>Apply tiles to surface pressing each tile firmly. Make sure that all edges are in contact with the surface and that tiles are securely adhered.</p>
<p><b>TIP</b></p>  <p>PaperForms can be installed on a canvas or a thin plywood frame for ease of installation, transportation and finishing.</p>	<p><b>GENERAL</b></p>  <p>Make your installation last by applying tiles at a height that makes sense for the environment. Prevent tile damage and keep your PaperForms looking beautiful.</p>	 <p>Tiles should be dusted or vacuumed regularly. Use a damp cloth or sponge to clean tiles that have been finished. If tiles are kept unfinished a soft eraser may be used to remove slight marks.</p>	 <p>Follow the manufacturers recommended removal directions for each adhesive material. Remove tiles gently to prevent damage to surfaces. Wet the tiles thoroughly for best results.</p>

Still have questions?  
Drop us a line or give us a call:

Email: [info@mioculture.com](mailto:info@mioculture.com)  
US Toll Free: 1-888-563-3916  
International: +1 (215) 925-9359

**MIO**  
511 North 13th Street  
Philadelphia PA 19123

[MIOCULTURE.COM](http://MIOCULTURE.COM)

