

■■■ MIO Culture®

Parts List:

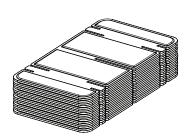


10 x Felt Modules

1




Unpack the Nomad System by cutting tape carefully to avoid damaging modules.

2

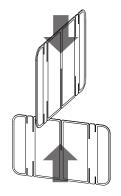

Insert one module into the other along the central slot creating an X assembly shown. Repeat this step for all modules.


3




Arrange one row of X assemblies in the desired wall perimeter. Leave approximately one inch (2.5 cm) between X assemblies.

Closed Assembly:


4

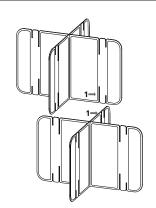

Insert subsequent rows of X assemblies into the bottom row. Use the long side slots (#1) for closed assemblies. Repeat this step to desired height.

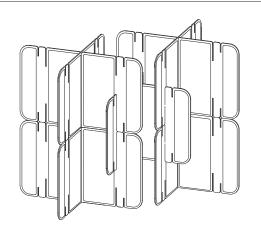


Single box closed assembly

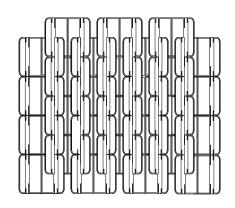


Finished! Use the selected slot throughout the entire assembly. Each box contains 5 sqf [.46 sqm] in the closed assembly.

Open Assembly:

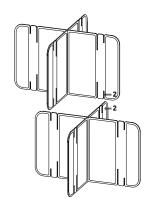


Insert subsequent rows of X assemblies into the bottom row. Use the short side slots (#2) for open assemblies. Repeat this step to desired height.

5

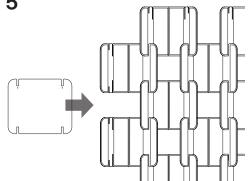


Insert aluminum spacers at the end of each open row to prevent sagging and improve stability.

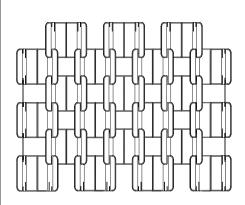



Finished! Use the selected slot throughout the entire assembly. Each box contains 7 sqf [.65 sqm] in the open configuration.




Turning Corners:

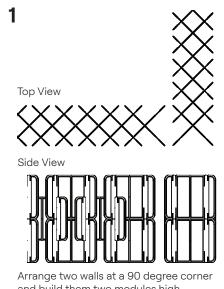

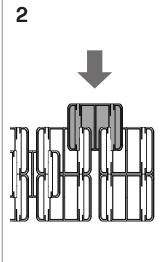

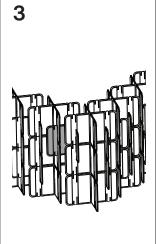

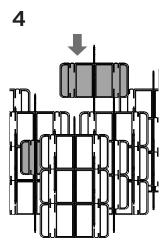

Arrange two walls at a 90 degree corner and build them two modules high.


Connect the walls together using an X assembly.

Continue building the wall with another row of modules.

Add another X assembly to the opposing connection point. Repeat steps 2-4 to desired height.


How to Clean:

Everyday Care

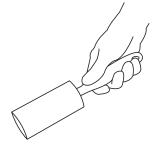

Vacuum modules with a handheld attachment to avoid dust and dirt buildup, especially in high traffic area installations. Alternatively lint, dirt, hair, or fuzz can be easily removed with a lint roller or tape.

Spot Cleaning

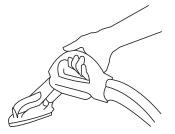

Spot clean to eliminate small stains or dirt. Start by removing loose dirt with a vacuum. Wet a soft cloth, with warm water, and dab the stain. Repeat until the stain has been removed. Tougher stains can be removed using a small amount of delicate hand-washing detergent.

Washing Modules



Soiled modules can be washed in a sink. Use warm water and clean by dabbing with cloth or absorbent material. Remove excess moisture with a dry towel. Lay modules to dry on a flat surface with absorbent material below. Turn modules over periodically until they are completely dry. Do not scrub.

Disinfecting Modules



Nomad System Felt can be cleaned with alcohol or a 1:10 bleach and water solution (approximately 5000 ppm) for high disinfection. For best results leave the solution at least one minute on the module surfaces. Clean after with a damp cloth using warm water.

Still have questions? Drop us a line or give us a call:

Email: info@mioculture.com US Toll Free: 1 - 888 - 563 - 3916 International: +1 (215) 925 - 9359

MIOCULTURE.COM



